
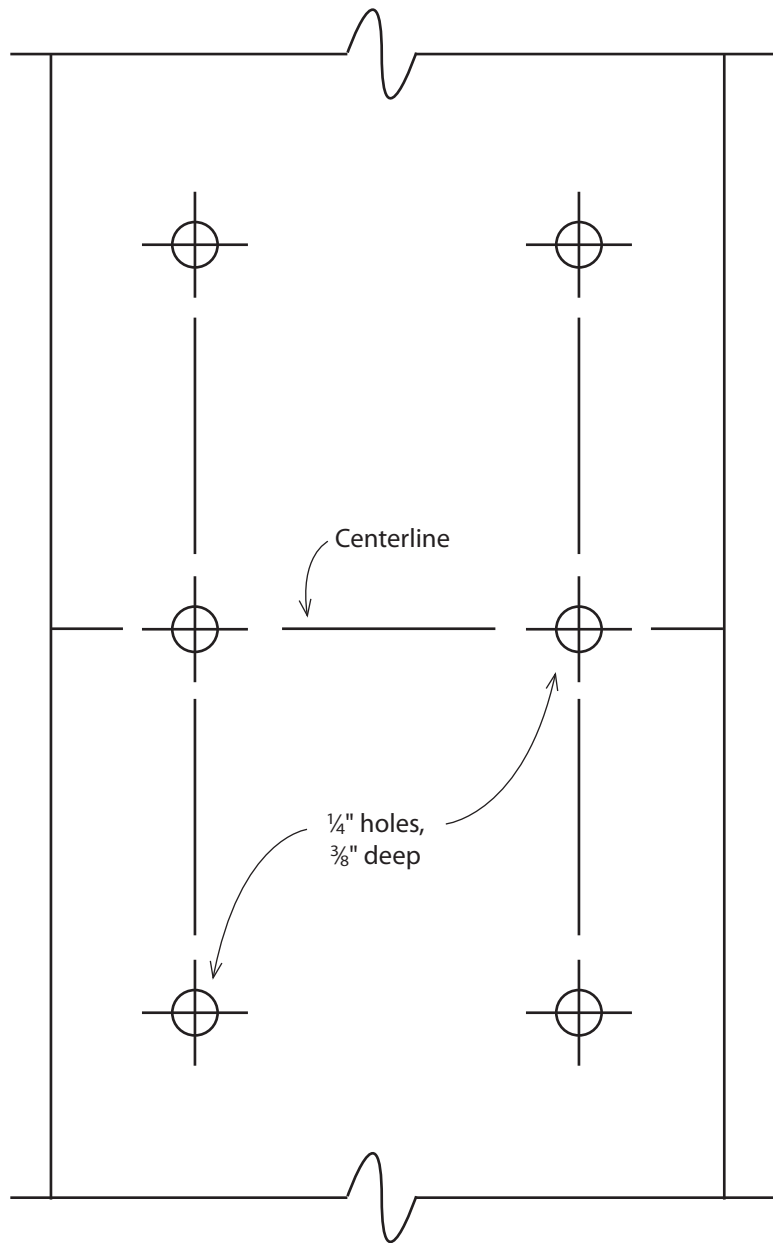


FULL-SIZE HOLE PATTERN

This pattern will help you position the shelf-pin holes for the Picture-Frame Storage Cabinets shown in the Nov/Dec 2010 issue of *My Home My Style*. See pages 48-51 of that issue for more information.

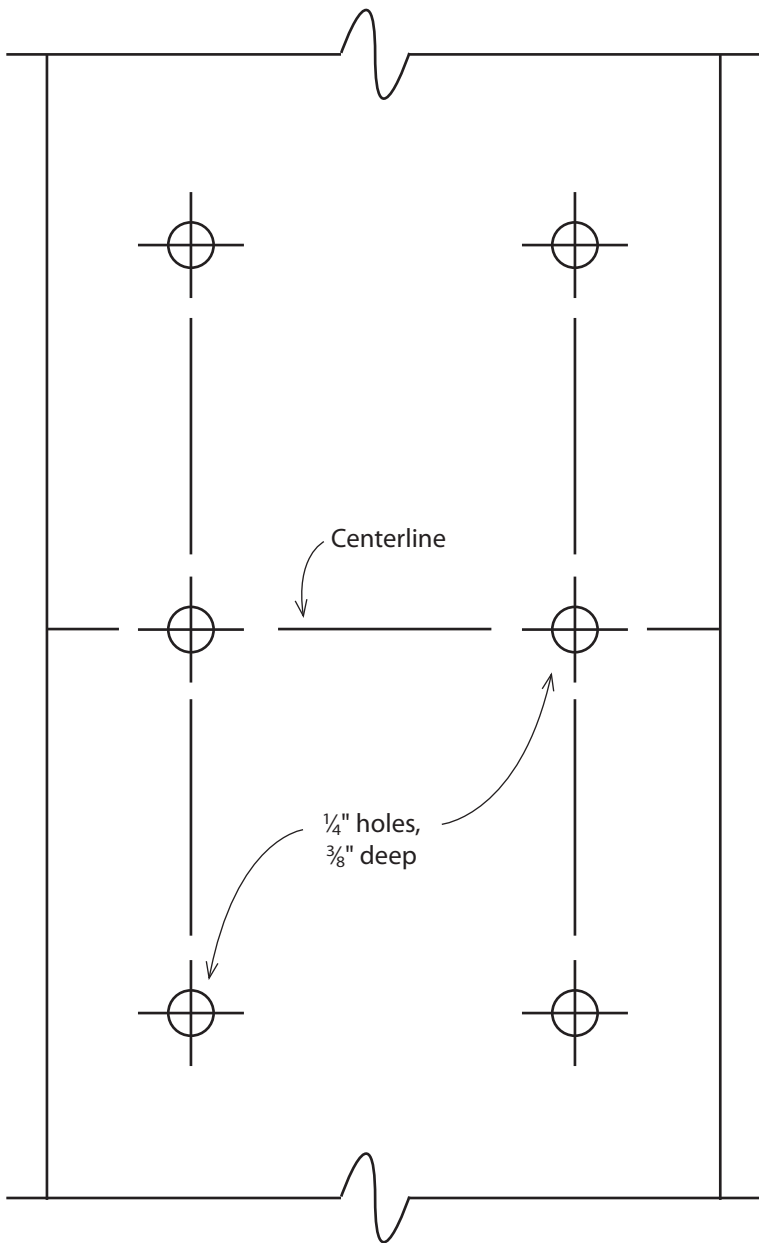

Instructions:

- 1) Measure the length of the cabinet side piece to locate the centerline.
- 2) Cut out the paper pattern, apply a light coat of spray adhesive, and place it on the workpiece so the centerlines match up.
- 3) Wrap tape around a 1/4" drill bit, 3/8" from the tip. This will indicate how deep you need to drill.
- 4) Drill through the paper pattern — being careful to center the bit on the crosshairs and hold the drill straight.
- 5) Repeat on the other side piece(s).