



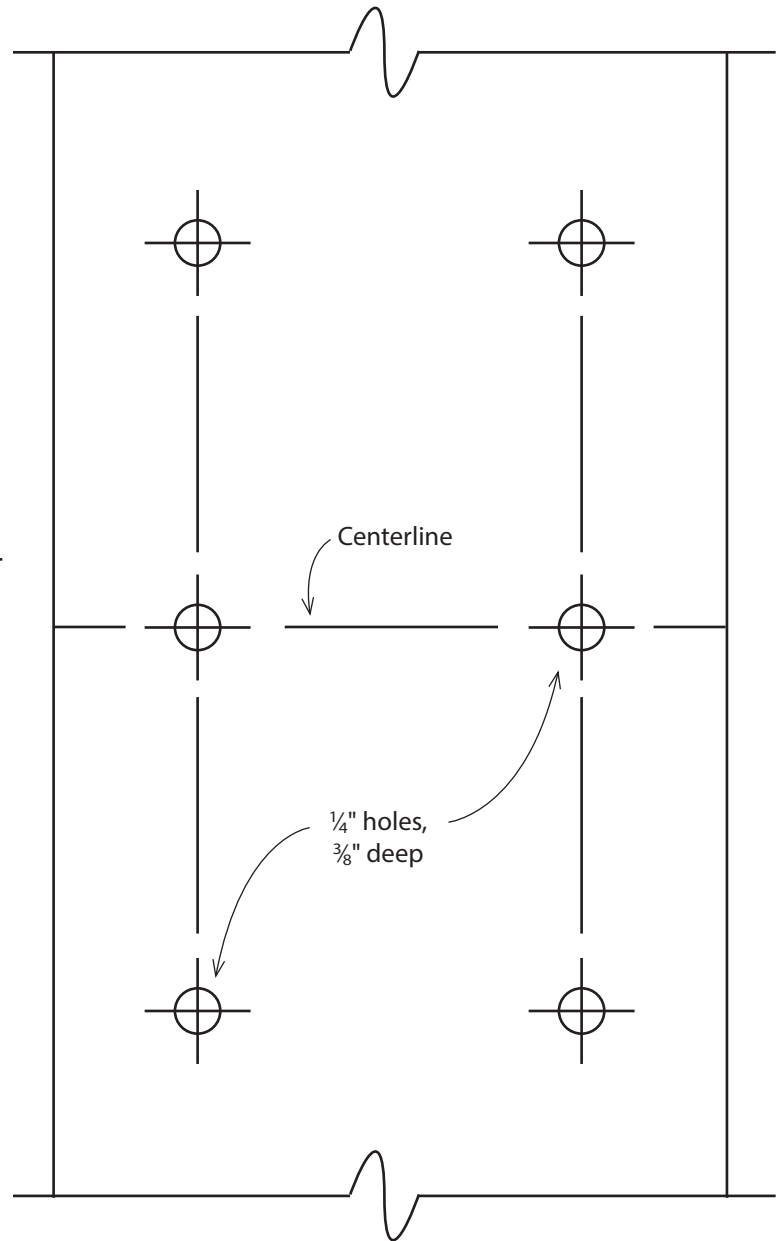

## FULL-SIZE HOLE PATTERN

This pattern will help you position the shelf-pin holes for the **Picture-Frame Storage Cabinets** shown in the October 17, 2014 eNote.

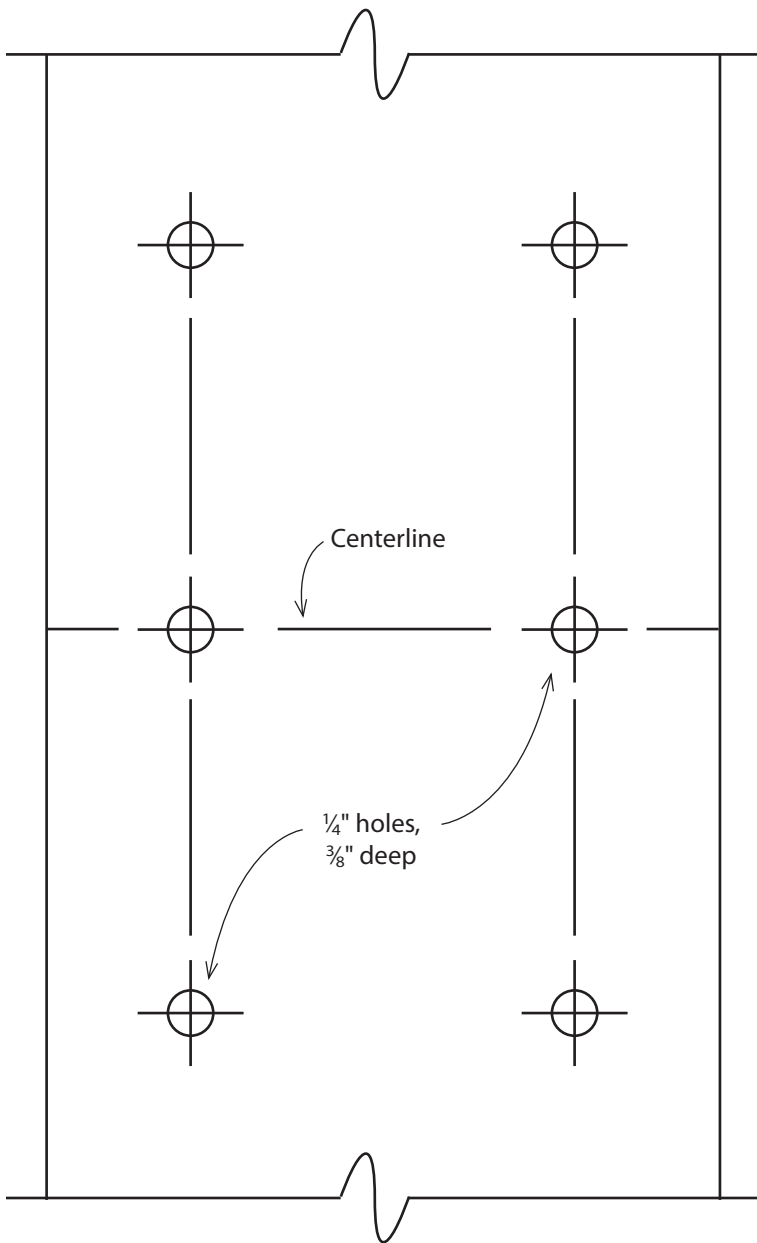

### Instructions:

- 1) Measure the length of the cabinet side piece to locate the centerline.
- 2) Cut out the paper pattern, apply a light coat of spray adhesive, and place it on the workpiece so the centerlines match up.
- 3) Wrap tape around a  $\frac{1}{4}$ " drill bit,  $\frac{3}{8}$ " from the tip. This will indicate how deep you need to drill.
- 4) Drill through the paper pattern—being careful to center the bit on the crosshairs and hold the drill straight.
- 5) Repeat on the other side piece(s).